

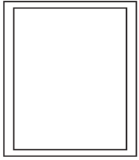


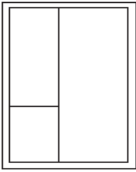
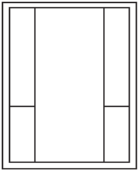
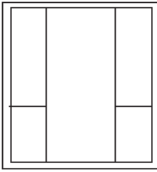
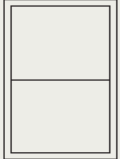
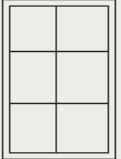

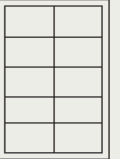
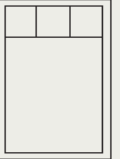
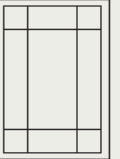


Timber Door Frames



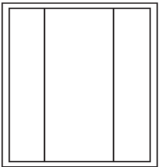
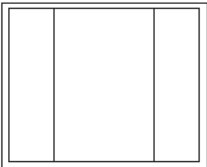
2105

885	885	1716	1716
			
TDF-D1	TDF-D2	DDFS	DDFNS
Door Frames to suit 820 Door		Door Frames to suit two 820 Doors	

2105

1200	1500	1500	1800		
					
TDFD3	TDF-D4	TDF-D5	TDF-D6		
OPTIONAL SIDE LITES					
					
CHAIR RAIL	6-LITE	8-LITE	10-LITE	HERITAGE	FEDERATION

2105

462	1317	1750	2580
			
P1	P2	P3	P4
Frames to suit 400mm Panels			